

## WF-9800LiS Series

### Deckmount Converter-Charger



## THE HEARTBEAT OF TODAY'S RVs

Distributed in the U.S.A. and Canada by  
ARTERRA DISTRIBUTION

(877) 294-8997

Warranty: [warranty@wfcoelectronics.com](mailto:warranty@wfcoelectronics.com)

Fax (574) 294-8698

[www.wfcoelectronics.com](http://www.wfcoelectronics.com)



EXPERT PRODUCT SUPPORT

Power PROs Technical Support  
(877) 294-8997

## TABLE OF CONTENTS

SAFETY INFORMATION .....	3
GENERAL INFORMATION	
Reverse Battery Protection .....	3
Automatic Cooling Fan .....	4
Over-Temperature Protection .....	4
Electronic Current Limiting .....	4
Short Circuit Protection .....	4
CIRCUIT PROTECTION	
DC Fuses .....	5
OPERATIONAL FEATURES - LEAD ACID	
Three Stage Smart Charging .....	5
OPERATIONAL FEATURES - LITHIUM	
Two Stage Smart Charging .....	6
Converter Modes of Operation .....	6
Bulk Mode .....	7
Absorption Mode .....	7
TROUBLESHOOTING INSTRUCTIONS	
Converter Output Voltage .....	8
Reverse Polarity Fuses .....	9
Troubleshooting Flow Chart .....	9
GENERAL COMPLIANCE INFORMATION	
Agency Listings .....	9
INSTALLATION INSTRUCTIONS	
Mounting the Enclosure .....	10
DC Connections .....	10
AC Connections .....	11
SPECIFICATIONS .....	13
WARRANTY INFORMATION .....	14





<b>⚠ WARNING</b>
<b>RISK OF ELECTRICAL SHOCK</b> Disconnect or isolate all power supplies before making electrical connections. More than one disconnection or isolation may be required to completely de-energize equipment. Contact with components carrying hazardous voltage can cause electric shock and may result in severe personal injury or death.
<b>NOTICE</b>
All wiring must conform to local, national, and regional regulations. Use copper conductors only for all wire connections. Do not exceed the electrical ratings for the WF-9800LiS Converter-Charger as this may cause equipment failure and/or electrical shock which could result in severe personal injury or death.
<b>⚠ CAUTION</b>
<b>EQUIPMENT SERVICING</b> This product should be installed by an experienced certified technician. CAUTION and care must be taken when servicing this equipment. To prevent severe shock or electrocution, consult your servicing dealer.
<b>⚠ WARNING</b>
<b>SPARK HAZZARD</b> This unit employs components that can produce arcs or sparks. To prevent fire or explosion, do not install in compartments containing batteries or flammable materials (LP gas). This product is NOT ignition protected.
<b>⚠ CAUTION</b>
<b>DO NOT OBSTRUCT VENTILLATION</b> To prevent fire, DO NOT cover or obstruct enclosure ventilation openings. DO NOT mount unit in a zero-clearance compartment as overheating may result. For continued protection against risk of fire or electric shock, replace faulty DC fuses and AC breakers with ones of the same type and ratings as are installed.
<b>⚠ WARNING</b>
<b>BATTERY SYSTEM</b> Use converter only on appropriate battery systems. Other usage may cause personal injury and damage. Consult all battery manufacturer's recommendations for additional safety information before use.

## GENERAL INFORMATION

### WF-9800LiS Series Converter-Charger Safety Features

#### Reverse Battery Protection

The WF-9800LiS Series Converter-Chargers will charge the 12-volt house battery if installed. A battery does not have to be installed for WF-9800LiS Series Converter-Chargers operation. When a battery is installed, two reverse polarity fuses are installed to protect the converter circuitry. The fuses are located on the rear panel of the enclosure near the AC power cord (refer to Figure 1 on the next page). This feature prevents permanent damage to the converter from a battery connected into the circuit backwards. In addition to protecting the converter-charger, the reverse polarity fuses are the main connection between the converter-charger and the DC fuse board of a distribution center.



## Automatic Cooling Fan

The cooling fan in the WF-9800LiS Series Converter-Chargers is controlled by the current (Amperage) load attached to the converter, NOT by temperature. The on-board microprocessor increases fan speed as the total load increases and decreases fan speed as the load decreases.

Unlike traditional temperature-controlled fans, the load-controlled fan provides better component cooling by avoiding temperature spikes which can lead to premature component failure.

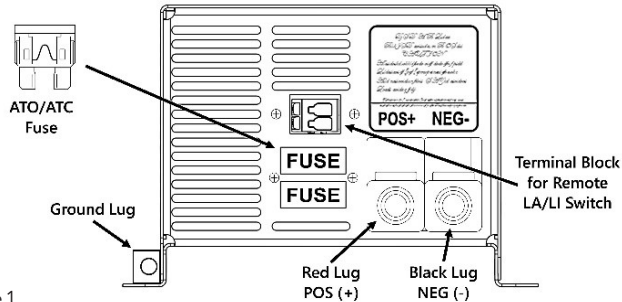


Figure 1

## Over-Temperature Protection

If the internal temperature of the converter exceeds a critical point, it will shut down. This protects the unit from excessive heat that may damage sensitive components. The unit will restart once the temperature inside has dropped.

## Electronic Current Limiting

In the event that the output current exceeds the maximum rating for the WF-9800LiS Series Converter-Charger, the output current will remain constant, but the output voltage will begin to drop. If this occurs, the unit will recover once loads are reduced.

## Short-Circuit Protection

Should a short circuit occur in the RV, the WF-9800LiS Series Converter-Charger will drop the voltage output to zero volts. If the short-circuit condition is removed and no other fault conditions are detected, the converter will resume normal operation. However, short-circuit conditions are **dangerous**, and an RV will require inspection by a qualified service technician.

## CIRCUIT PROTECTION

### WF-9800LiS Series Converter-Charger Fuses



### DC Fuses (12 Volts)

The DC fuse receptacle on the rear panel of the WF-9800LiS Series Converter-Charger has space for 1 (one) or 2 (two) Reverse Battery Protection fuses (see Figure 1 above). These fuses should be replaced with ATC or ATO automotive type fuses, such as Littelfuse type 257 or Bussmann type ATC. Each converter model requires a different Amperage value fuse as follows:

- WF-9835LiS - (1) 40A
- WF-9845LiS - (2) 30A
- WF-9855LiS - (2) 35A
- WF-9865LiS - (2) 40A
- WF-9875LiS - (2) 40A

## OPERATIONAL FEATURES

### Lead Acid Converter Modes



### Three-Stage Smart Charging

In order to maximize battery life, it is best to charge batteries slowly, keep them topped off with a trickle-charge when the RV is not being used. The 3-Stage “smart” charger continuously measures the battery voltage output and regulates the amount of charge using three modes of operation; Absorption, Bulk and Float modes.

All WFCO power converters are automatic three-stage switching power supplies. The converter senses which mode it needs to be in by checking the RV system voltage.

The converter normally provides a constant target output voltage of 13.6 VDC (nominal) to power all the branch circuits. However, it is current limited, and if the output (load) current reaches its maximum, the output voltage will drop as necessary to hold the converter’s maximum output current level (the Amperage rating) without exceeding it.

If the output current reaches its maximum (normally caused by a discharged battery), this will cause the converter to go into Bulk Mode, which means the target output voltage will change to 14.4 VDC and a timer will start. Although the converter is outputting 14.4 VDC, you will not be able to read that on a voltmeter due to the voltage-current relationship. From the paragraph above, as load current increases, output voltage decreases. The actual output voltage will not rise until the load current is reduced, which happens naturally as the battery charges or if 12 VDC appliances are turned off.

Bulk Mode will be maintained until the current draw drops to approximately five Amps, or until the timer reaches four hours (whichever happens first). Then the target output voltage is changed back to 13.6 VDC for Absorption Mode. Lights that are powered from the output may change brightness slightly at that time.

**Note:** For a detailed explanation of the charging modes, please refer to our publication “Theory of Operation”, document #AD-TD-0001-0.

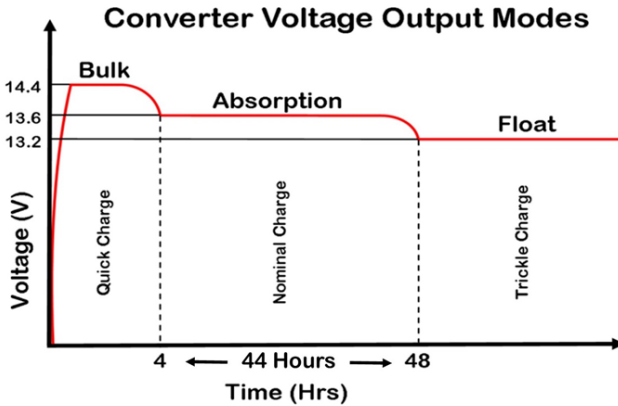


Figure 2

**OPERATIONAL FEATURES**  
Lithium Converter Modes



### Two-Stage Smart Charging

The two-stage “smart” charger continuously measures the battery voltage output and regulates the amount of charge using two modes of operation: Bulk and Absorption mode.

### Converter Modes of Operation

Understanding output voltages of a two-stage converter.

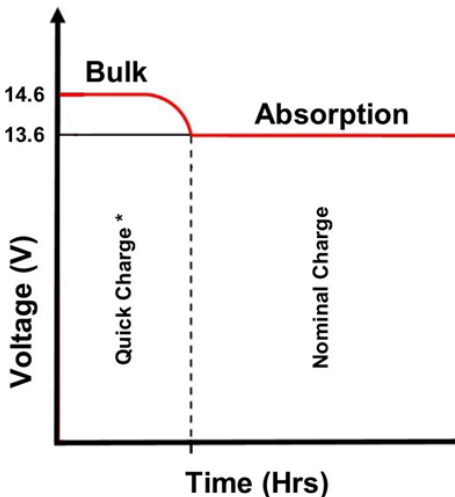


Figure 3 \* 1 Hr (min), 4 Hrs (max)



### **Bulk Mode:**

This mode is designed with 2 purposes in mind. First, to quickly restore the energy back into the battery. Second, to ensure the lithium cells inside the battery remain balanced. This is accomplished by boosting the output voltage to 14.6 VDC and allowing the maximum current to flow as required by the loads.

The bulk mode stage could last anywhere from 1 to 4 hours based on the battery and load current which is being used. For a full battery, the bulk stage has a minimum time requirement of 1 hour, which allows the lithium cells inside the battery the time required to “balance”. For an empty battery, the bulk stage has a maximum time requirement of 4 hours. If your application requires longer than 4 hours (such as a larger battery bank > 200 Ahr), a simple cycling of power will reset the timers.

As the energy is restored into the battery, the DC system voltage will climb and the current from the converter will decrease. If the total amperage draw from the converter reaches a preset point (within the 1 to 4 hour timer), the converter is designed to drop out of bulk mode.

### **Absorption Mode:**

This mode is designed with 1 purpose in mind. This purpose is to provide a safe operating voltage for all loads in the RV. This is accomplished by reducing (from bulk mode) the output voltage to 13.6 VDC and remaining at this voltage until the power is cycled to the converter.

The absorption mode stage is the default or normal mode of operation, which has no timer associated with it. In this mode an output of 13.6 VDC is provided to the DC circuits in the RV. This voltage has a long-term history as the acceptable voltage for all loads in the RV, and should not place undue stress (nor reduce the longevity) of the lights and appliances in the RV. This is not to say that all loads will have an issue with a constant higher voltage; however, some loads may have an issue. Please refer to the individual manufacturer’s specifications for acceptable operating voltage range of the connected load.

### **WARNING**

#### **CHECK INSTALLED BATTERY TYPE**

Use converter only on appropriate battery systems. Trying to charge a lead-acid battery when the mode switch is set for lithium may damage the attached batteries. Make sure the LA/LI switch is set for the correct battery chemistry installed.



# TROUBLESHOOTING INSTRUCTIONS

## Troubleshooting the WF-9800LiS Series Converter-Charger

### ⚠ CAUTION

#### EQUIPMENT SERVICING

This product should be installed by an experienced certified technician. CAUTION and care must be taken when servicing this equipment. To prevent severe shock or electrocution, consult your servicing dealer.

### Converter Output Voltage

Before checking the WF-9800LiS Series Converter-Charger output voltage, disconnect the battery cables at the battery. Make sure the converter is plugged into a live AC source (105-130 Volts). Check the converter output voltage at the battery with a voltmeter. Place the meter probes on the disconnected battery cables; place the **Positive** (red) meter probe on the + **Positive** red battery wire and place the **Negative** (black) meter probe on the -**Negative** black wire on the battery cable (Figure 4). Be sure you have good connections at the cables. With the switch in the Lead Acid (LA) position, if the voltage reads 13.6 - 14.4 VDC (+/- 0.2) with no load, the converter is functioning properly. With the switch in the Lithium (LI) position, if the voltage reads 13.6 - 14.6 VDC (+/- 0.2) with no load, the converter is functioning properly.

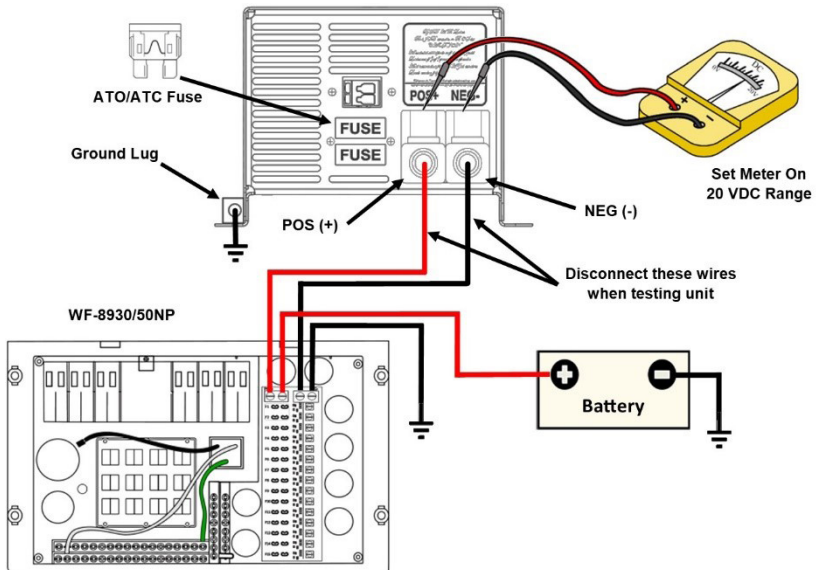


Figure 4

If the converter output voltage at the battery reads 0.0 VDC, or if the battery is not charging check for an open inline fuse in the battery wire circuit. One may have been installed by the RV manufacturer. Also check for loose wiring connections.



## Reverse Polarity Fuses



If there is no DC output coming from the WF-9800LiS Series Converter-Charger output lugs, first check the reverse polarity fuses on the rear panel. Then, visually inspect the fuses for any breaks in the fuse element. If no breaks are found, use a continuity tester to check for continuity. If the reverse polarity fuses are blown, it means the RV battery was accidentally connected in reverse, either at the battery or at the converter. Investigate the connections and reconnect the cables properly. Replace the fuse with the same type and amperage rating as the original.

**IMPORTANT:** These fuses protect the converter from damage if the RV battery is accidentally connected in reverse. A reversed battery connection, even if for only a second, will cause these fuses to blow. If the above checks have been made but the converter output still reads 0.0 VDC, the converter is not functioning properly.

### Troubleshooting Guide for the WF- 9800 Series Deck Mount

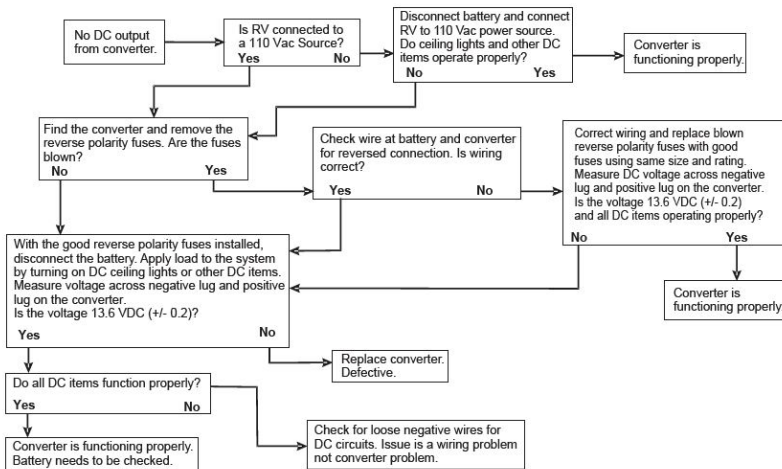


Figure 5

## GENERAL COMPLIANCE INFORMATION

### Agency Listings

#### UL

The WF-9800LiS Series Converter-Chargers are UL-Listed, and cUL-Listed (Canadian).

#### FCC Compliance Class B

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



# INSTALLATION INSTRUCTIONS

## Installing the WF-9800LiS Series Converter-Charger

### Mounting the Enclosure

The WF-9800LiS Series Converter-Charger enclosure should be mounted in an accessible area such as a wall or in the side of a cabinet. Select a mounting location near the shore power and battery (batteries), in an area where the owner is unlikely to store items as this could reduce clearance requirements, obstruct ventilation openings and affect the performance of the converter (Figure 6).

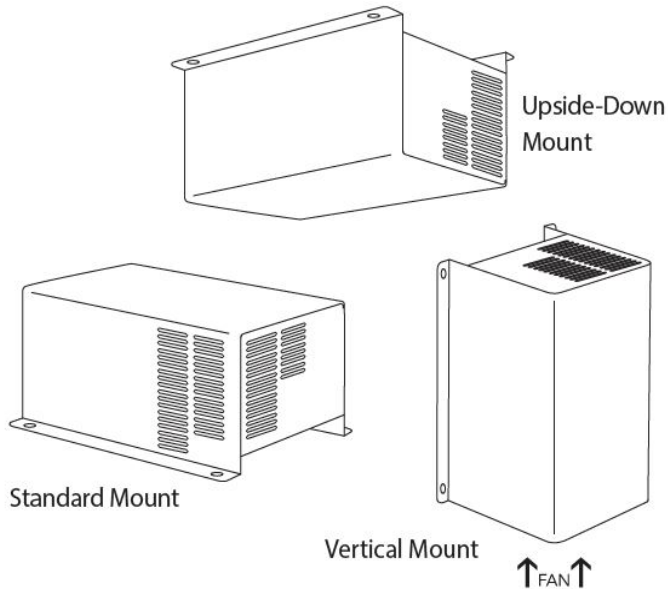


Figure 6

The location should be selected to prevent excessive heat, water, moisture, dust and dirt entering the unit installed. As a rule, allow two cubic feet of clear airspace and or any additional venting as necessary to prevent the unit from overheating. The front of the enclosure should not be obstructed to allow free air flow for the cooling fan (Figure 6).

An 8AWG copper conductor shall be used to bond the WF-9800LiS Series Converter-Charger to the vehicle frame.

### DC Connections

Connect a Red 8 AWG wire to the POS+ lug on the distribution center's fuse board. Make sure this lug is torqued properly. In a similar fashion, connect a Black 8 AWG wire to the NEG- lug on the distribution center's fuse board.

A battery IS NOT required for converter operation. The battery works in conjunction with the converter to supply DC power to the RV. A battery is typically only necessary if you do a lot of dry camping or have slide-outs and/or a leveling system.



Deep-cycle batteries are recommended. They can be either of the Lead-Acid or the AGM type. The Amp hour (Ah) rating should be shown on the battery; for example, 120A. If you do a lot of dry camping, we recommend using a deep cycle battery rated at 100 Amp hours or more. The higher the Amp hour rating, the longer the battery will be able to deliver power when the converter is not plugged in. If you are plugged into shore power most of the time, a normal deep cycle battery will work.

When installing batteries, the batteries **MUST** be the same brand and type (preferably the same age as well). Adding more batteries will provide longer use of DC appliances when not on shore power. Due to the additional battery load, the converter's battery charging efficiency may be reduced. However, even in normal "Absorption Mode" (13.6 VDC range), the batteries are being charged, just at a slower rate.

**NOTE:** The converter will not work without AC input. You may notice that, when a battery is connected or reconnected to the converter's output, the onboard fan may energize for a few seconds. This is normal and is the converter's circuitry recognizing the battery voltage. You will notice the same occurrence when the converter is initially energized on Shore power.

**No Switch Installed:**

To use the converter in the lead/acid mode only, nothing needs to be done. To use the converter in the lithium mode only, place a jumper wire across the two WAGO connectors on the back of the converter.

**With Remote Switch Installed:**

Determine location for switch. Switch should be dry contact SPST with two wires coming from it (24AWG to 12AWG). Connect the open end of the two wires to the WAGO connectors on the back of the converter.

**To operate the converter modes Using Switch:**

If switch is open, then the converter will be in the lead/acid mode and the output voltage will read 13.2 vdc to 13.6 vdc. If the switch is closed, then the converter will be in the lithium mode and the output voltage will read approx. 14.6 vdc.

**⚠ WARNING**

**RISK OF ELECTRICAL SHOCK**

Disconnect or isolate all power supplies before making electrical connections. More than one disconnection or isolation may be required to completely de-energize equipment. Contact with components carrying hazardous voltage can cause electric shock and may result in severe personal injury or death.

**AC Connections**

The WF-9800LiS Series Converter-Chargers receive power from the power cord on the opposite end of the enclosure from the DC lugs. The WF-9835LiS, WF-9845LiS and WF-9855LiS have a standard 15 Amp plug.

The WF-9865LiS and WF-9875LiS have a 20 Amp plug due to the higher current required from the AC line to produce the high DC current output. The 20 Amp plug and corresponding receptacle are shown in Figure 7 below. The 20 Amp receptacle must be wired back to the fuse box using 12AWG wire minimum.

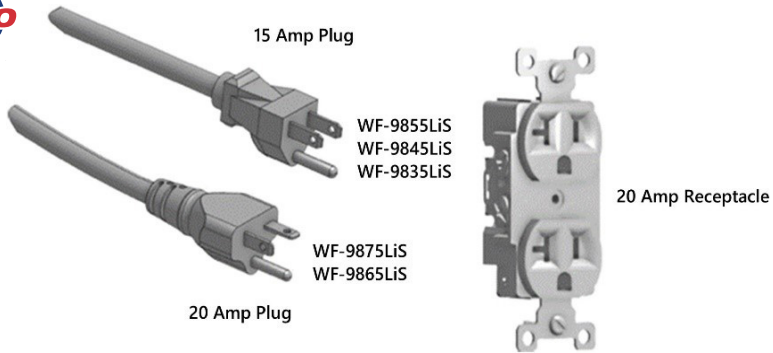


Figure 7

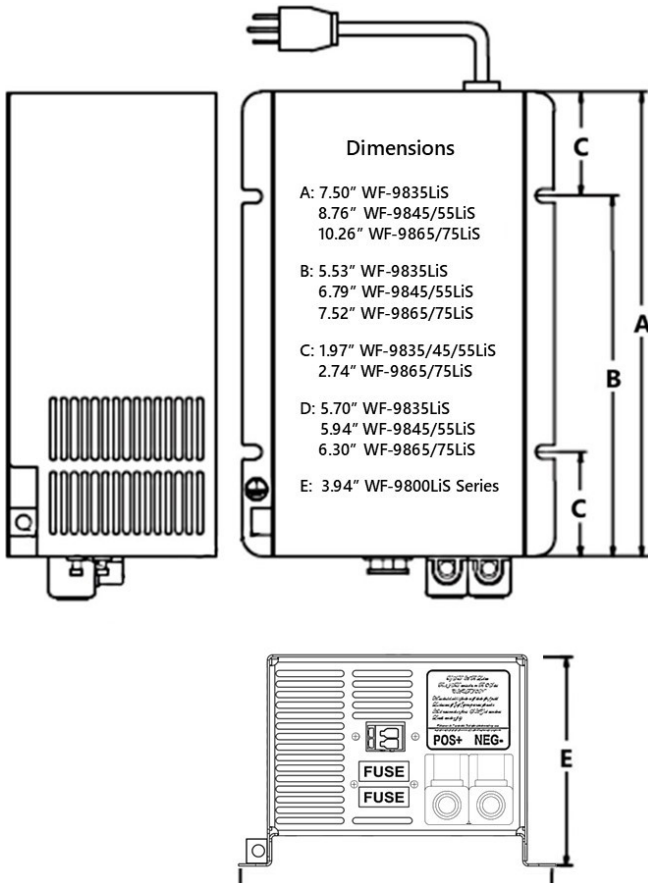


Figure 8



WF-9800LiS Converter Specification					
Model No.	WF-9835LiS	WF-9845LiS	WF-9855LiS	WF-9865LiS	WF-9875LiS
LA & AGM / Lithium ion					
<b>Converter Input Power</b>					
Voltage	105-130 Vac				
Frequency	60 Hz				
Max. Input Current @105 Vac	7 A	9 A	11 A	13 A	15 A
Max Power	600 watt	770 watt	940 watt	1110 watt	1280 watt
<b>Converter Output Power</b>					
Continuous Power	475 watt	610 watt	750 watt	880 watt	1020 watt
Rated Dc Output Voltage	13.6 V / 14.6 V				
Rated Dc Current	35 A / 32.5 A	45 A / 41.5 A	55 A / 50 A	65 A / 60 A	75 A / 70 A
Charging Control	Automatically controlled by microprocessor				
Charging Modes	3-stage intelligent charge / 2-stage intelligent charge				
Intelligent Charge Mode	Absorption, Bulk and Storage / Absorption and Bulk mode				
Battery Adaptability	LA & AGM / Lithium ion				
Absorption Charge Voltage	13.6 V				
Bulk Charge Voltage (4 Hrs)	14.6 V				
Storage Charge Voltage	13.2 V / X				
Regulation	±1% accuracy against input or load changes				
Cooling Fan	Two speed according to the dc load amperage				
VA Efficiency	> 80% (under 70% of load condition)				
<b>Protection</b>					
Overload	Current-limiting & shut down; auto recovery upon return to normal load				
Short-circuit	Shut down & auto recovery upon return to normal load				
Over-temperature	Shut down & auto recovery upon return to normal load				
Battery Reverse Polarity	Protected by fuse; same rated fuse replacement required				
<b>Dc Distribution Board</b>					
Dc Battery Lugs: NEG-, POS+	Lugs accept 2 AWG to 14 AWG wire; lug screws are 5/16" Allen head				
<b>Mechanical</b>					
Dimensions: WxHxD	4 5/8 x 4 x 7 1/2 in 117.5 x 101.6 x 190.5 mm	4 3/4 x 4 x 8 3/4 in 120.7 x 101.6 x 222.3 mm		5 1/8 x 4 x 10 1/4 in 130 x 101.6 x 260.4 mm	
Weight	4 lb / 1.8 kg	5.25 lb / 2.4 kg	5.5 lb / 2.5 kg	6.25 lb / 2.8 kg	6.75 lb / 3.1 kg
Environmental Conditions	0°C - 40°C / 32°F - 104°F. 20 ~ 90% non-condensing				
Safety	UL458 certified; FCC Class B compliant				

Figure 9



## CONSUMER LIMITED WARRANTY for WFCO Electronic Products

WFCO extends, to the original owner, a Two Year Limited Product Warranty. This warranty is in effect from the date of original purchase for a period of two (2) years. This limited warranty is extended specifically for and is limited to Recreational Vehicle application and is only valid within the continental United States, Alaska, Hawaii and the Provinces of Canada. WFCO warrants, to the owner, that its products are free from defects in material and workmanship under normal use and service based on its intended use and function. This warranty is limited to the repair or replacement, at WFCO's discretion, of any defective parts or defective assembly. Any implied warranties of merchantability or fitness for intended use are limited in duration unless applicable State Law provides otherwise. You may have other rights as specified by each individual state.

### EXCLUSIONS and LIMITATIONS

The OEM warranty specifically does not apply to the following:

- Any WFCO product that has been repaired or altered by an unauthorized person;
- Any damage caused by misuse, faulty installation, testing, negligence, accident or any WFCO product installed in a commercial vehicle;
- Any WFCO product, whose serial number has been defaced, altered or removed;
- Any WFCO product, whose installation has not been in accordance to the WFCO written instructions;
- Any consequential damages arising from the loss of use of the product including but not limited to: inconvenience, loss of service, loss of revenue, loss or damage to personal property, cost of all services performed in removing or replacing the WFCO product. Specifications are subject to change without notice or obligation.
- Any WFCO Electronics products sold through unauthorized Internet sources (Example: eBay) will be excluded from all warranty coverage offered by Arterra Distribution / WFCO.

### CONSUMER WARRANTY CLAIM PROCEDURE

Upon determination and validation by an authorized OEM dealer that a WFCO product has a defect, a Return Goods Authorization (RGA) number will be required before the product can be returned. The RGA number can be requested by completing the Warranty Information Fax Sheet and appropriate Troubleshooting Form found at [www.wfcoelectronics.com](http://www.wfcoelectronics.com). Once these forms have been completed, email the forms along with Proof of Purchase to [warranty@wfcoelectronics.com](mailto:warranty@wfcoelectronics.com) or fax the three documents to the Warranty Department at (574) 294-8698. After receipt of the forms, an RGA number will be issued. This number shall appear on all correspondence with warranty service. Upon validation of the warranty, WFCO shall replace the product with a like product. The RGA number shall be placed on the outside of the carton used to return the product for ease of identification. Do not mark directly on the product. The product must be packaged properly to avoid further product damage which could cause a non-warrantable condition.

### WARRANTY ASSISTANCE

The consumer may contact the selling Dealer or OEM for warranty assistance. The consumer may also contact Arterra Distribution, exclusive distributor to WFCO Products at: (574) 294-8997 or Fax (574) 294-8698.





**THE HEARTBEAT OF TODAY'S RVs**

[WFCOELECTRONICS.COM](http://WFCOELECTRONICS.COM)